



ISO 9001 : 2000, BS EN 9001
APPROVED BY BVQI



Quality and reliability is our tradition

KYORITSU

EARTH TESTER MODEL 4200



TRUERMS

NEW



- The earth resistance from 0.05 to 1200Ω can be measured without the auxiliary earth spikes. (The Multiple Earthing System.)
- **True RMS**
Accurate true RMS readings of AC current including distorted waveform from 1mA to 30.0A
- **Noise Check Function**
A function to detect current, which effects on an earth resistance measurement and display "NOISE" mark on the LCD.
- **Memory function**
Save and display up to 100 measurement data.
- Data hold function / Buzzer function / Back light function
- Compliant with Safety Standards of IEC 61010-1 : CAT.IV 300V Pollution degree2

KEW EARTH CLAMP TESTER

MODEL 4200

KYORITSU ELECTRICAL INSTRUMENTS WORKS,LTD.


Specification

Function	Range	Resolution	Measuring range	Accuracy
Earth resistance Auto range	20Ω	0.01 (Ω)※	0.00~20.99 (Ω)	±1.5%±0.05Ω
	200Ω	0.1 (Ω)	16.0~99.9 (Ω)	±2%±0.5Ω
			100.0~209.9 (Ω)	±3%±2Ω
			160~399 (Ω)	±5%±5Ω
	1200Ω	1 (Ω)	400~599 (Ω)	±10%±10Ω
600~1260 (Ω)			—	
AC current (50Hz / 60Hz)	100mA	0.1 (mA)	0.0~104.9 (mA)	±2%±0.7mA
	1000mA	1 (mA)	80~1049 (mA)	
Auto range	10A	0.01 (A)	0.80~10.49 (A)	
	30A	0.1 (A)	8.0~31.5 (A)	
Operating system	Earth resistance function: Constant voltage injection, Current detection, (Frequency : Approx.2400Hz) Dual Integration AC current function : Successive Approximation			
Over-range indication	"OL" is displayed when input exceeds the upper limit of a measuring range			
Response time	Approx. 7 seconds (Earth resistance) Approx. 2 seconds (AC current)			
Sample rate	Approx. 1 times per second			
Power source	DC6V : R6P (sizeAA manganese battery) × 4pcs, or LR6 (sizeAA alkaline battery) × 4pcs			
Current consumption	Approx. 50mA (max. 100mA)			
Measurement time	Approx. 12 hours (when R6P is used) Approx. 24 hours (when LR6 is used)			
Auto power-off	Turns power off about 10 minutes after the last button operation.			
Applicable standards	IEC 61010-1 : 2001 (CAT.Ⅳ 300V Pollution degree2)			
Withstand voltage	AC5320Vrms / 5 seconds Between the Transformer jaws fitted parts and Case enclosure (except for jaws)			
Conductor size	Approx. 32mm max.			
Dimension	246(L) × 120(W) × 54(D)mm			
Weight	Approx. 780g (including batteries)			
Accessories	Battery R6P : 4pcs Instruction manual : 1pc Resistor for operation check (MODEL 8304) : 1pc Hard case (MODEL 9128) : 1pc			

★Crest factor ≤ 3 (50Hz / 60Hz, peak value shall not exceed 60A) ※Counts equal to or less than 4 counts are corrected to 0.

Accessories


● Resistor for operation check

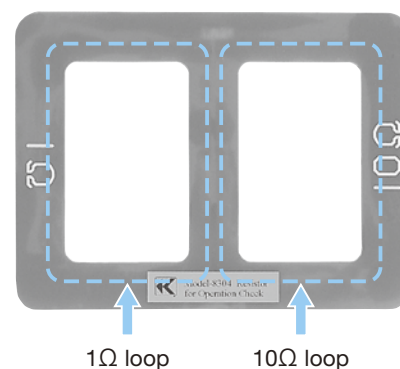

● Hard case



Why earth resistance can be found by only clamping it?

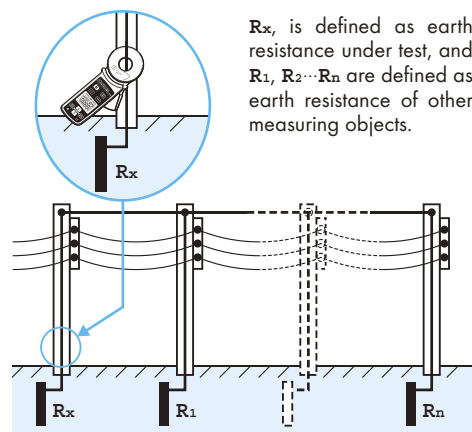

Voltage V is applied to the object (Resistance R_x) measured from the voltage injection transformer CT1, and the current I corresponding to the earth resistance is flowed.
The current I is detected with detection transformer CT2, and object (Resistance R_x) measured can be put out by the calculation. (refer to the right chart)

$$\frac{V}{I} = R = R_x + R_s$$

$$R_x \gg R_s = \frac{1}{\sum_{i=1}^n \frac{1}{R_i}}$$

$$\frac{V}{I} = R_x$$



Safety Warnings :

Please read the "Safety Warnings" in the instruction manual supplied with the instrument thoroughly and completely for correct use. Failure to follow the safety rules can cause fire, trouble, electrical shock, etc. Therefore, make sure to operate the instrument on a correct power supply and voltage rating marked on each instrument.

■ For inquiries or orders :



**KYORITSU ELECTRICAL
INSTRUMENTS
WORKS, LTD.**

No.5-20, Nakane 2-chome, Meguro-ku,
Tokyo, 152-0031 Japan
Phone: 81-3-3723-0131
Fax: 81-3-3723-0152
URL: <http://www.kew-ltd.co.jp>
E-mail: info@kew-ltd.co.jp
Factories: Uwajima & Ehime